

VW Amarok 2H0

Webasto Telestart Installation Manual v. 1.0.



Included:

1 pcs	Webasto T91 - Receiver
1 pcs	Webasto T91 - Key FOB
1 pcs	Antenna
1 pcs	Cable Set
1 pcs	Installation Kit
1 pcs	Webasto Holder


1

Preheater Location.



2

There is a GND / ground point under the carpet, screw down the brown connector here.

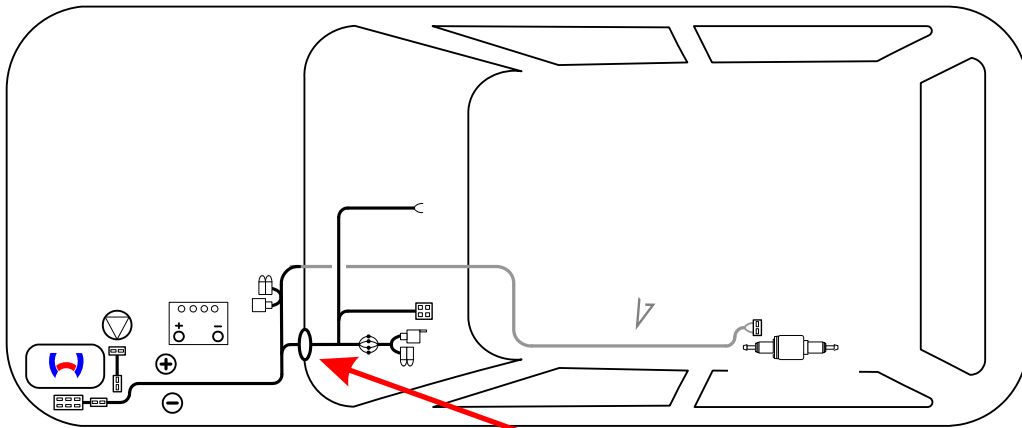

Wiring harness pass through
1 Protective rubber plug
2 Wiring harnesses of heater, heater control



3

Remove plug from webasto heater.
Slide green security bolt.




4

Insert white connector (wire with terminal and seal at end) into 1 pin hole. Tie the wire as original installation.



5

Put in telestart module, insert blue plug and antenna plug.
Fasten bracket 3 on M5x16 bolt 2
1 Receiver

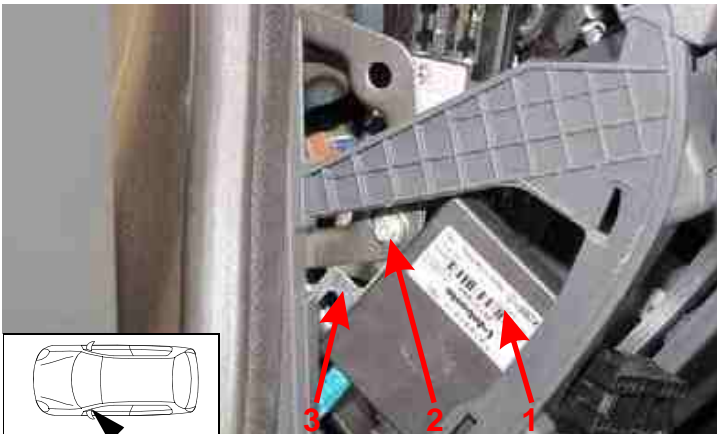

6

U can put in antenna on the plastic cover of the driver seat.



7

Before parking the vehicle, make the following settings:

- 1 Set temperature to "max."
- 2 Air outlet to windscreen
- 3 Set fan to level "1", or possibly "2"