

Volkswagen Polo

PDC - installation manual v. 1.0.



Included:

2 pcs	Wirings
1 pcs	Control unit
4 pcs	Sensors - Candy White
4 pcs	Holders
1 pcs	Buzzer
1 pcs	Installation Manual

1

Remove rear lights. Unscrew white bolts and pull the lamps out.

**2**

Unscrew four marked T25 bolts on both sides of car. Unscrew four T25 bolts from the bottom of bumper.

**3**

Take off whole bumper and lay it down on something soft.

**4**

There are four marked signs at rear side of bumper. Drill four 18MM holes at marked places.



5

Degrease hole area. Stick sensor holders using attached stick 3M tape.



6

Plug in wires to the sensors. Attach wires to the bumper. Longer ones on the passenger side.



7

Remove cover from the black plug. Pull the plug through rubber. Attach plug cover. Attach bumper and rear lights.



8

Remove plastic cover from left side of trunk. Using double sided stick tape attach Buzzer and PDC module on marked places. Screw brown wire with round connector to the ground point. Pass the other wires to the front of car under the steering wheel.



9


Remove upper cover from steering wheel column. There is no need to remove steering wheel. Unscrew three T20 bolts and remove lower cover. Unplug power battery from car. Unplug Grey plug from slip-ring.



10

Solder wires:


1. brown - to the orange/brown
2. orange - to the orange/black
3. red - to the +12v after ignition

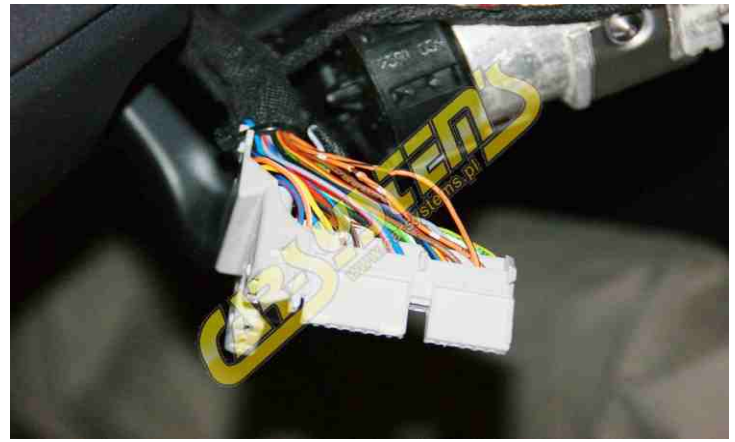

A

Coding:

After installation add Address 10 to the Can gateway installation list and code the pdc module as it is shown at pictures. Block 10 - Park Assist --> Coding --> Long Coding helper.

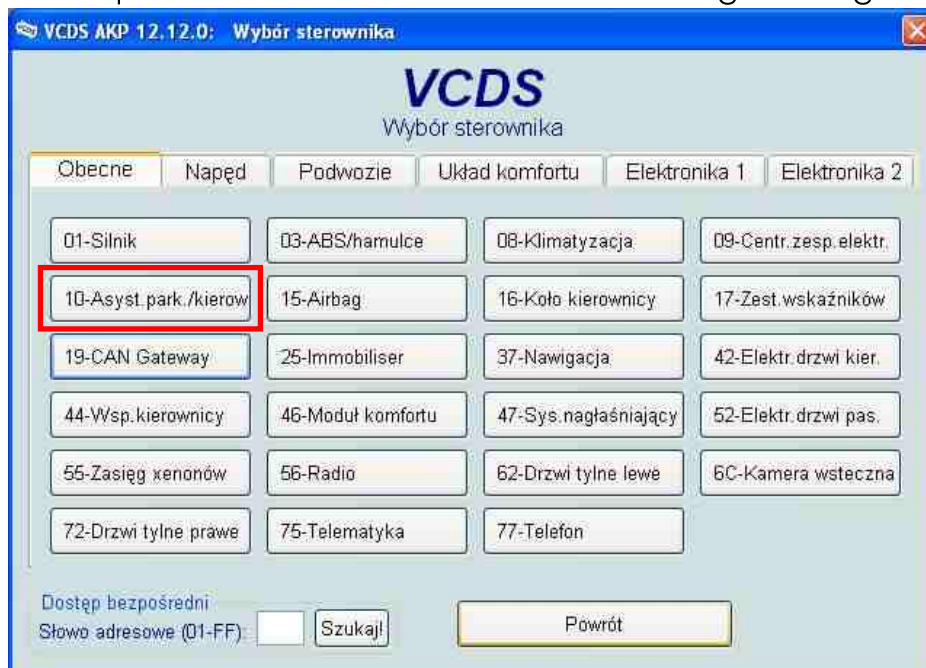

B

C