

Volkswagen Touran

Webasto - circuit board removal instructions
V.1.0




1

First, the bolts placed on the front bumper should be removed. Then we remove the bolts placed on the wheel arches. We remove the bumper, folding in the front direction.

A



B

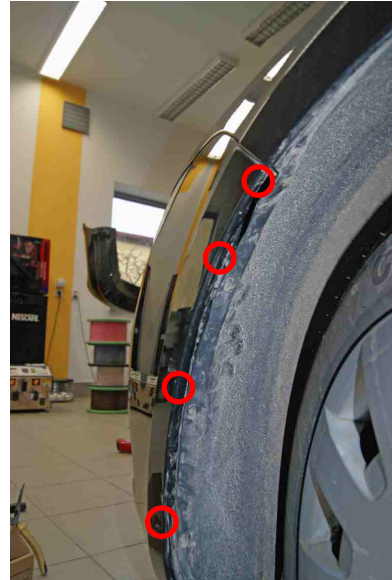

2

The webasto heater is placed in the right section of the car, under the headlight, next to the sprinkler fluid tank.

The dismantling process starts with removing the bolt that holds the air filter.



3

We disconnect the following:

- fuel line (1)
- the power connection of the heater (2)
- connection of the cooling circuit pump (4)
- can bus connection (3)



4

Remove the plastic casing which covers another connection boxes and remove the screws which need to be extracted in order to access the circuit board.

A

Disconnection:

- we remove the circuit board and the glow plug heater (1)
- disconnect the plug which is responsible for heating the fuel (2)
- disconnect the plug responsible for the temperature sensors (3)

And remove the bolts indicated on the drawing.



B

After the screws are removed connection box from the heater.



5

Insert the new webasto plate and reverse the disassembly steps - in this way the installation process.