Media Device Interface – Golf VI Installation manual v1.0

Retrofit-Kit VW MEDIA-IN to connect an external audio source (iPod, mp3 - Player or USB-HDD)

Compatible with head unit :
- VW RCD 310
- VW RCD 510 (not for devices with index AA/ ..AB)
- VW RNS 310
- VW RNS 315
- VW RNS 510 (only for devices with index ..A or higher)

Not for vehicles with factory installed CD-Changer

The factory fitted AUX-IN connector get lost - mp3 player with jack connection needs to be connected to the media-in interface

Device control (depends on device) as well as display of music title and play list through factory fitted radio- navigation unit

Scope of delivery :
- MEDIA-IN Interface inkl. box 5N0035342E
- Wiring Plug & Play Length 1.8m
- USB Adapter

Producer's code:
5N0035342E+USB

Use flat-head screwdriver to remove right side cover.

Cover is simply mounted on latches, just pull it out.

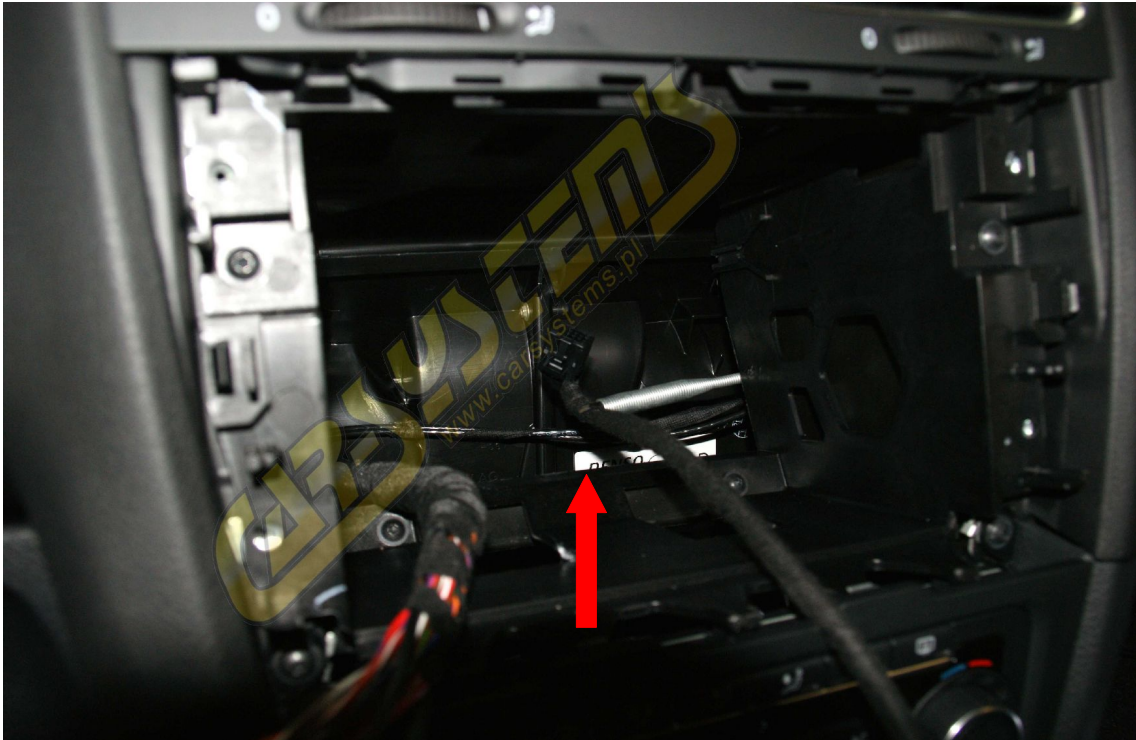Use soft flat tool or simply your nails to lever frame around stereo.

Frame is mounted on latches, carefully pull it out.

- Unscrew four T20 screws mounting stereo.
- Pull whole unit out.
- Unplug power and antenna

- Insert a broach or rod **above** the glove compartment.

– Fasten black plug from wiring harness to rod and pull it out at the right side of car.

- – Insert a cable zip tie into the right hole
- – Pull it out from the left hole
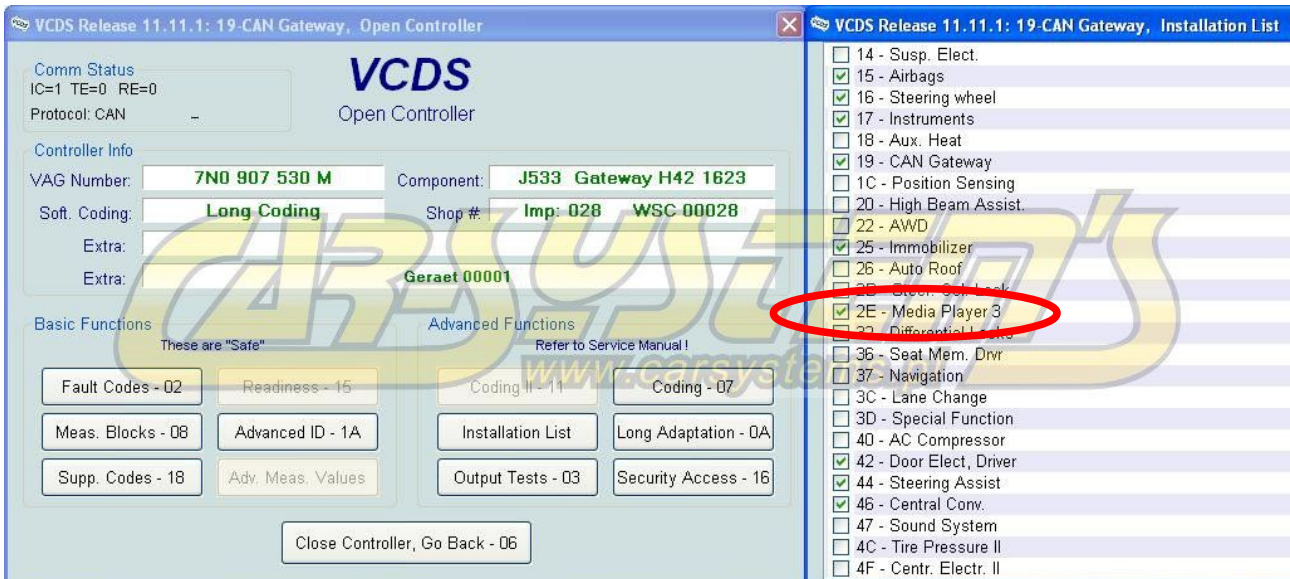- – It could be tricky and need some patience

- – If you close the glove box a little, there will be a small hole near the light.
- – Insert the USB or IPod adapter cable trough the hole.

- Insert the main plug into the module.
- Using cable zip tie attach the module (pic).
- Cut off the rest of tie.
- Install dash side cover.

- Plug in MDI wiring adapter
- Hide some wires behind climate control panel.
- Plug in radio or navigation.
- Make sure you input all plugs.

- Open controller 19 using VCDS → Installation List → mark 2E ; Media Player 3
- Save coding and close controller.
- Clear all errors from modules
- Plug in USB pendrive or Ipod/Iphone
- Have fun!